


# Pocket

## Assembly Instructions

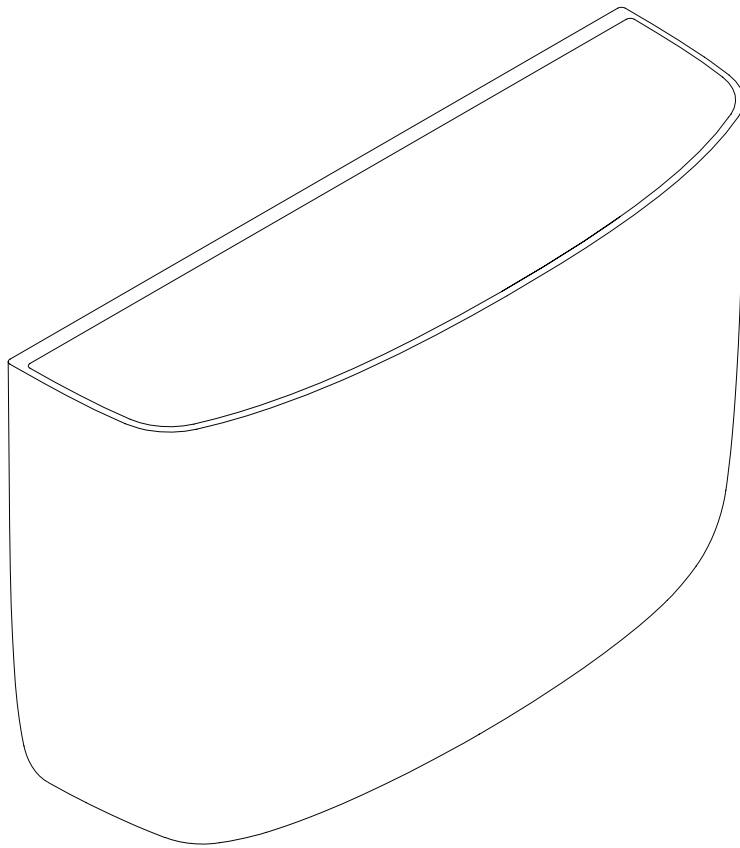


**normann**

C O P E N H A G E N


---

**1**  Drill size: 6mm

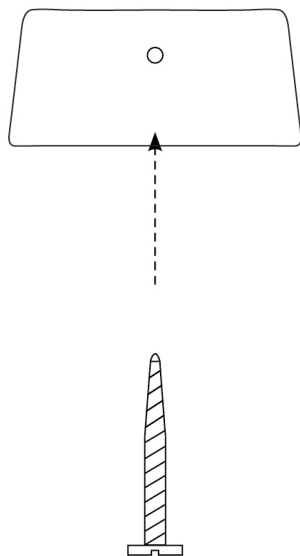

---

**2**

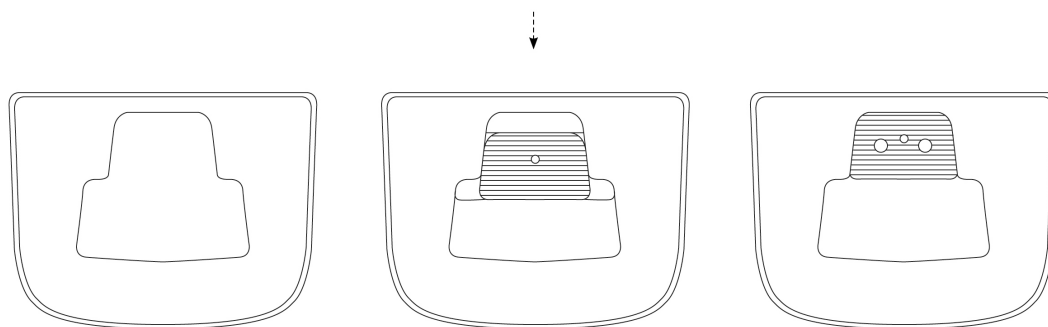

---

**normann**

C O P E N H A G E N